

# MOUNTING INSTRUCTION


## Replacing the Damper for System 920-400

No. 148789/00  
Date 2005-10-01

1. Free the spring **A** from the damper shaft.
2. Free the spring **B** on the damper shaft.
3. Loosen the two nuts **C** on the damper blade.
4. Remove the damper blade.
5. Remove the two screws from the damper shaft.
6. Pull out the damper shaft.
7. Fit a new damper shaft with spring and a new damper blade.

**N.B:** The arrow **D** on the damper blade must be angled downwards.

8. Tighten the spring **B** on the damper shaft.
9. Fit the spring **A** on the damper shaft.

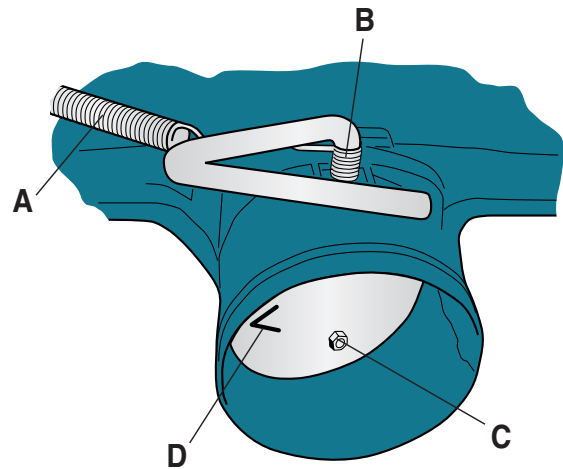

# MOUNTING INSTRUCTION

## Replacing the Damper for System 920-400

No. 148789/00  
Date 2005-10-01

1. Free the spring **A** from the damper shaft.
2. Free the spring **B** on the damper shaft.
3. Loosen the two nuts **C** on the damper blade.
4. Remove the damper blade.
5. Remove the two screws from the damper shaft.
6. Pull out the damper shaft.
7. Fit a new damper shaft with spring and a new damper blade.

**N.B:** The arrow **D** on the damper blade must be angled downwards.

8. Tighten the spring **B** on the damper shaft.
9. Fit the spring **A** on the damper shaft.

