

MOUNTING INSTRUCTION

Replacing the Damper for System 920-1500


No. 148790/00
Date 2005-10-01

1. Free the spring on the damper shaft.
2. Loosen the 3 screws **A** on the damper shaft.
3. Remove the damper blade.
4. Pull out the damper shaft.
5. Fit a new damper shaft with spring and a new damper blade.

N.B:

- The arrow **B** on the damper blade must be angled downwards.
- The damper shaft must be angled outwards from the suction trolley.

6. Fasten the 3 screws **A**.
7. Tighten the spring on the damper shaft.

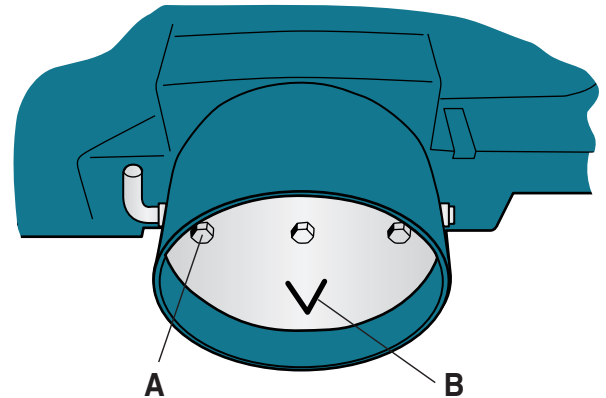

MOUNTING INSTRUCTION

Replacing the Damper for System 920-1500

No. 148790/00
Date 2005-10-01

1. Free the spring on the damper shaft.
2. Loosen the 3 screws **A** on the damper shaft.
3. Remove the damper blade.
4. Pull out the damper shaft.
5. Fit a new damper shaft with spring and a new damper blade.

N.B:

- The arrow **B** on the damper blade must be angled downwards.
- The damper shaft must be angled outwards from the suction trolley.

6. Fasten the 3 screws **A**.
7. Tighten the spring on the damper shaft.

