

Set-up instructions

L-PAK Series

L-PAK 150, L-PAK 250

50 Hz, 60 Hz

Settings for overload protection and transformer

1. Adjust the overload current setting according to the motor marking plate.
2. Connect the unconnected end of the lead 02 connected to F3 the to the connection point on the primary winding of the control transformer labeled with the voltage corresponding to the voltage on the motor marking plate.

Information regarding applicable currents and voltages is also found in the user manual.



Motor marking plate


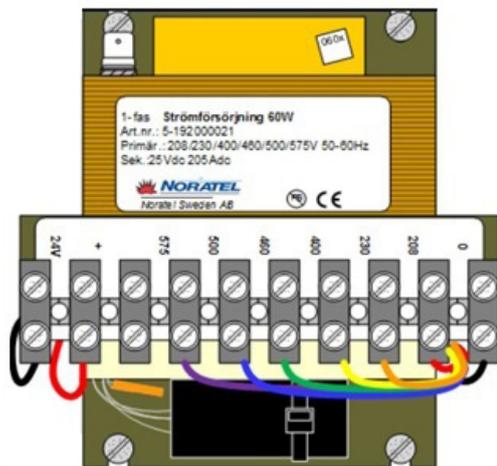


Illustration of the control transformer



Overload adjustment knob L-PAK 150

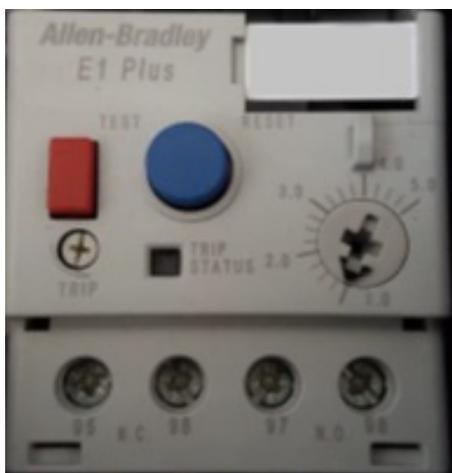

Overload adjustment knob L-PAK 250