

PRODUCT LEAFLET

Fan controls



Fan controls

Less heated air is extracted to outside, and less electricity consumed if the fan operates only while work is in progress. Switch the fan on/off manually at the hood, or automatically with a sensor clamp. Single-phase power supply to the operation box. The automatic fan control has a sensor clamp to be attached to the earth cable of the welding set for automatic start-up of the fan. Detects currents from 8 A. The operation box consists of a 30 VA transformer for the lighting kit in the extraction arm, a delay timer for fan stop variable from 0-5 minutes, and two separate connections for sensor clamps.

2025-05-20 2/6

Fan controls

|--|

Models

	Item number
	14518637
	14518737
	14518837
	14518937
	14519037 ^[1]
	14519137 ^[1]
	14519237 ^[1]
	14519337 ^[1]
	86900426
	86900421
Necturnan	89116055
Noctorman	89116053
Moderman	89116054
Moderman	89116056

2025-05-20 4/6

Models

	Item number
Abderman S. S.	89116059
Modernan	89116063
Abderman	89116052
Additional St.	89298071
Anderson S. S.	89116050
Modernus	89116051
	86900420
	86900422
	86900423
	86900424
	86900425
	86900427

 $^{[1]}$ One sensor clamp included

2025-05-20 5/6

Accessories

	Accessory	Item number
03	Sensor clamp to be attached to the earth cable of the welding power source.	14372199
	MS-131 Magnesense DP Transmitter	89219050

2025-05-20 6/6