


# IMPORTANT!

## N.B.

Make sure that the snap lockings on the cover are connected in a correct way.

When the suction trolley has been rolled in to the rail a transport safety lock must be removed from the arm holding the disconnection box.

Make sure that the carbon-brushes (X) on the disconnection box connects in a proper way to the collector bars on the rail.

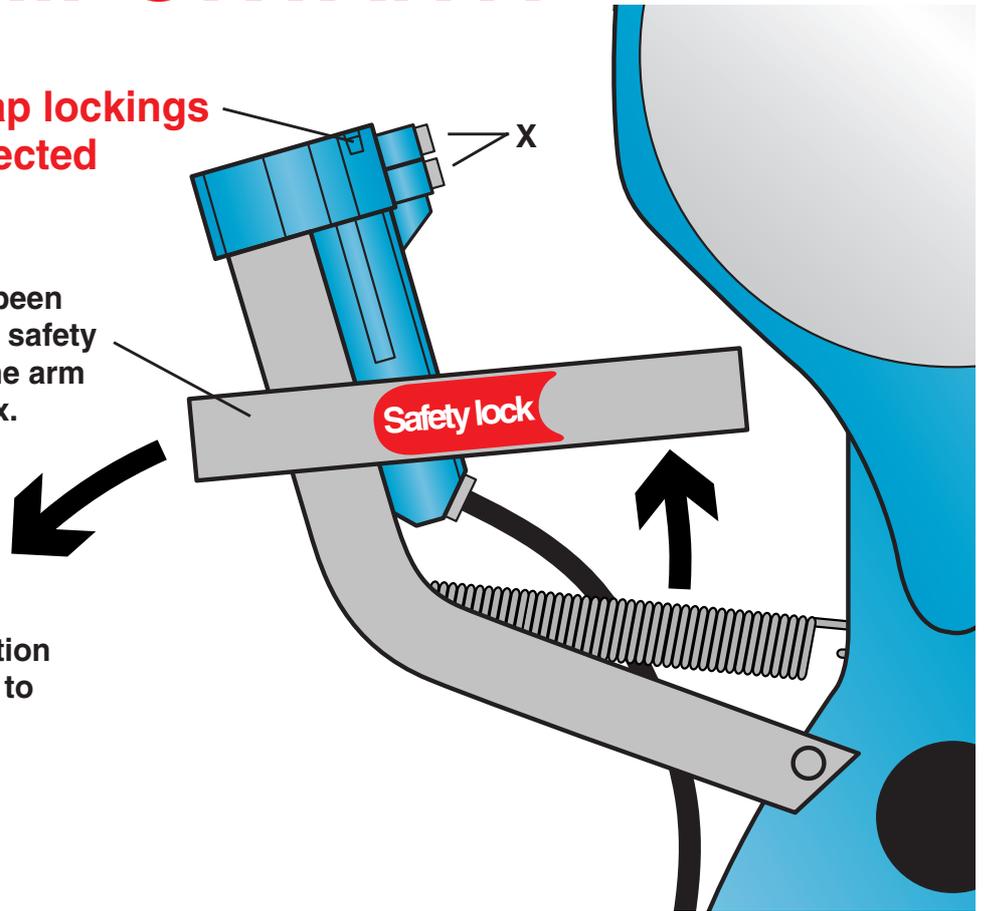

No. 148739/01


# IMPORTANT!

## N.B.

Make sure that the snap lockings on the cover are connected in a correct way.

When the suction trolley has been rolled in to the rail a transport safety lock must be removed from the arm holding the disconnection box.

Make sure that the carbon-brushes (X) on the disconnection box connects in a proper way to the collector bars on the rail.

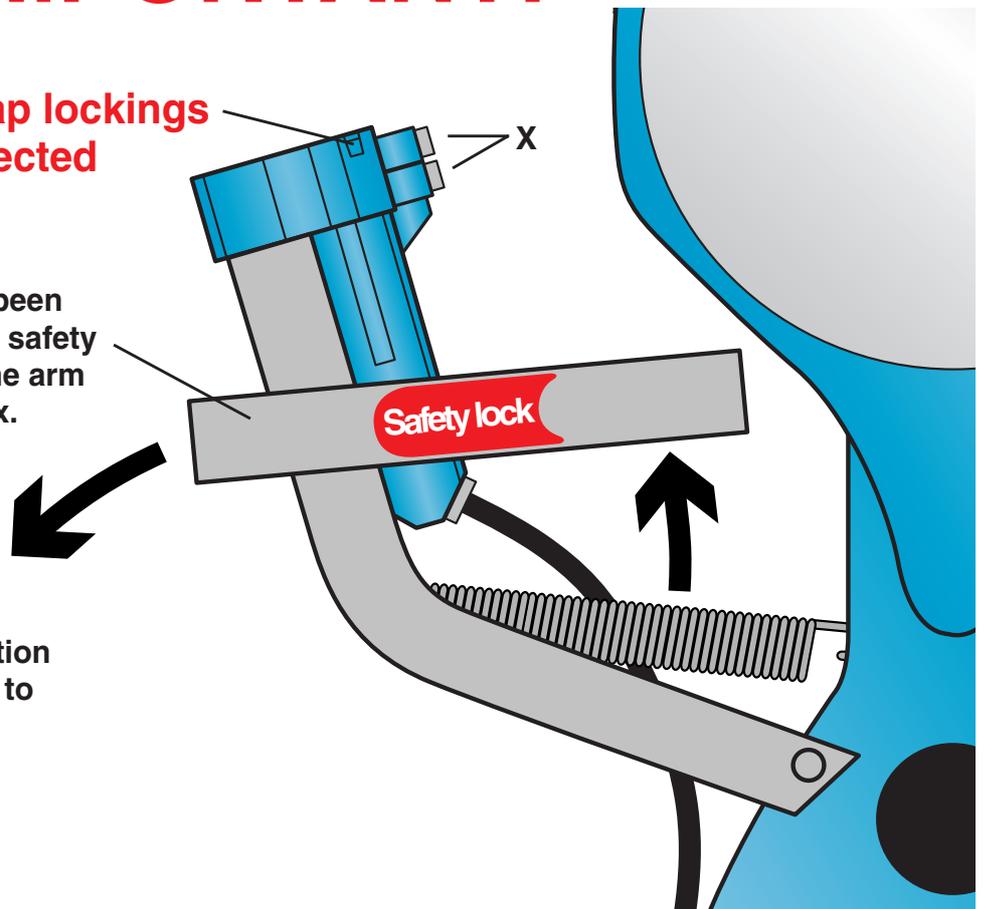

No. 148739/01