


## Vertical Hose Replacement

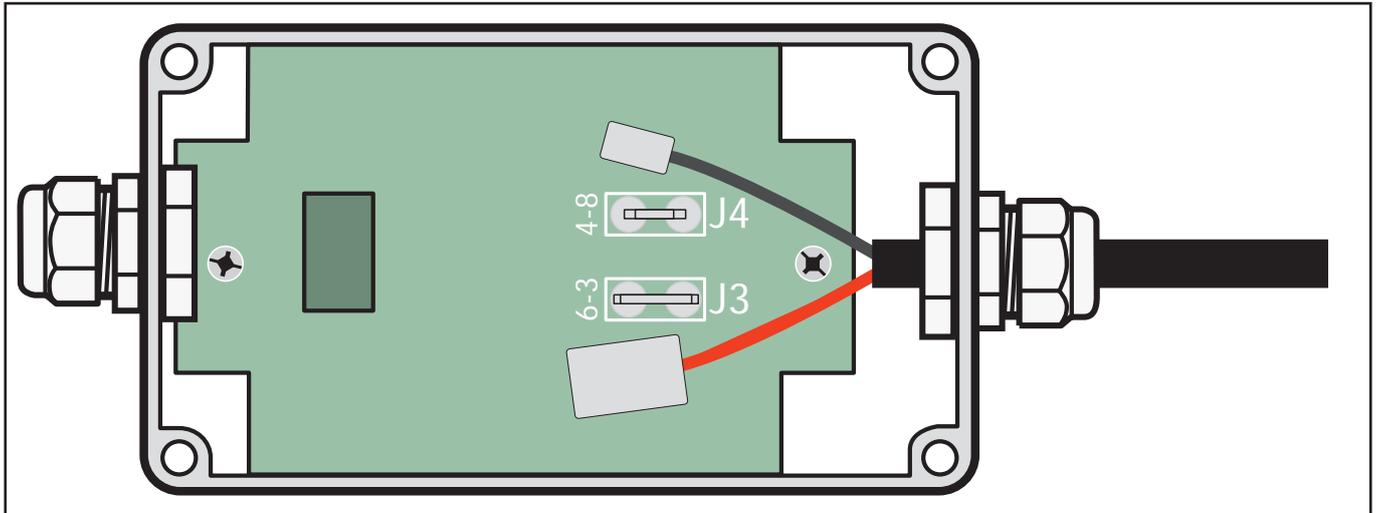

To attach the new hose:

1. Attach the one end of the hose to the electro magnet.
2. Pull the cable from the other end of the hose into the control box.
3. Attach the clips from the two cables to the control box. See the figure above.